




MHub Essential

Product name: MHub Essential
Model no.: 02300



©2026 LiviSense All Rights Reserved. All trademarks and service marks referred herein are property of their respective owners.

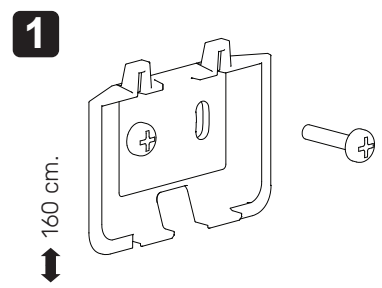


1 Mount the MHub Essential in a central location. For best coverage, we recommend mounting the MHub 160 cm from the floor.

Ensure you have a nearby power outlet.

Ensure a distance of at least 50 cm from other electronic devices.

Use either the double-sided tape or screws and plugs (5 mm drill, 25-30 mm deep) to secure the wall bracket.

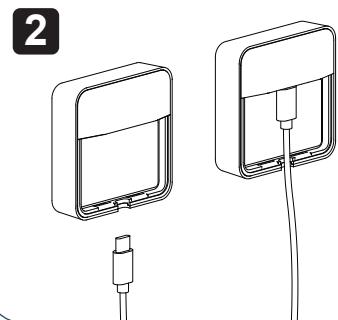


2 Then connect the USB-C cable to the back of the MHub Essential.

Troubleshooting for connection:

Save a picture of your MHub ID and PIN on your phone.
Copy and paste your 2.4 GHz Wi-Fi password into the app to avoid typing errors.


If you experience issues connecting to the MHub Essential:
Android: Clear cache under Settings > Apps > Cavius Alarm App.
iPhone: Restart your iPhone.
MHub: Disconnect the power for 30 seconds and reconnect.

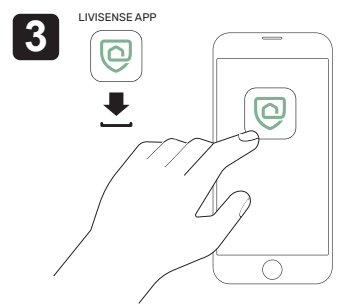

3 Download and install the LiviSense app from App Store or Google Play on your smartphone and/or tablet.

Start the LiviSense app and follow the instructions in the app.

Power up the MHub Essential by connecting the other end of the USB cable to the power supply and plug the power supply into the power outlet.

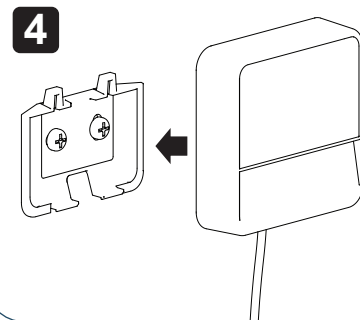

4 "Click" the MHub in place into the bracket with the USB cable facing down.

If you need to remove the MHub from the bracket, you can use a flathead screwdriver between the USB cable and the wall bracket to gently lift up and unlock it from the bracket.